



Introduction

D06 1600 is a one-hand operated diving flashlight for its sensible magnetic slide switch. Dual layer body makes the flashlight stable and anti-corrosion. Low stand-by current and high effective, good choice for diving and fishing.

Operation

1. Install battery
Unscrew tail cap, and install the battery with positive pole (+) towards head.
2. Choose lightness
Move switch forward or backward to adjust brightness.

Technical parameter

ANSI	High - Low
	1600lm-10lm
	1.5hrs-75hrs
	430m
	45970cd
	1.5m
	IPX8(Underwater 100m)
	Φ45mm(head) × Φ29mm (body) × 152mm(length)
	185.5g

Notes

1. Above-mentioned parameters (tested by using XTAR 18650 3500mAh) are approximate and may differ depending on battery and environment.
2. Working Voltage: 2.75-8.4V.
3. Compatible battery: 1*18650 & 2*CR123A&2*16340
▲18650 battery is recommended. Turning up the flashlight with a large current for a long time would cause the temperature of CR123A rise and the battery leakage. The flashlight may suddenly turns off with 16340 batteries.

Tips

1. Please make sure positive pole (+) towards the head. (This flashlight has anti-reverse function in case you got the polarity of the battery reversed.)
2. Considering flashlight consumes power when it is off, please remove the battery when the flashlight is not used for a long time. .
3. Do not wipe the battery with strong corrosive substance.
4. Flashlight fails to operate.

Possible Reasons	Solutions
Battery is exhausted or not compatible	Change battery
Battery is installed incorrectly	Make sure positive pole toward the head
Poor contact	1. Clean the contact surface of battery with alcohol 2. Tighten the head or tail cap

5. For more and updated information, please visit www.xtar.cc

Customer service

Please provide warranty number to dealer to get after-sales service.

- 15 days free replacement.
- 24 months free repair. If problems develop beyond 24 months, we will offer free repair service but charge for parts used. The distributor will inform you material fee or related freight if any before repair.
- Lifetime technical support.

Notes

1. Damage caused by misuse or intentional force is not covered by the warranty.
2. You are recommended to store warranty info online: register and login www.xtar.cc - Member Center - Warranty Information.
3. Warranty number (9-11 digit) can be found on the package or product.

Global After-sales Email: service@xtar.cc

US After-sales Email: serviceus@xtar.cc

Anti-fake inquiry

1. Scratch the anti-counterfeiting label on the package to get 18-digit number.
2. Input the number into the query page on www.xtar.cc (Contact Us - Anti-fake).



Warning: Do not radiate the light directly towards the eyes, serious injury or blindness could occur by misuse.



Shenzhen XTAR Electronics Co., Ltd
Address: 5th Floor, No.77 Xinhe Rd, Shangmugu, Pinghu Area, Longgang District, Shenzhen, Guangdong, China
Tel : +86-755-25507076 Fax : +86-755-25507076
Website : www.xtar.cc Email : info@xtar.cc
Zip Code: 518111